Controlling Your TV or AV Amplifier (Receiver)

You can control your TV with the supplied remote by adjusting the remote control's signal.
If you connected the recorder to an AV amplifier (receiver), you can also control the volume with the supplied remote.

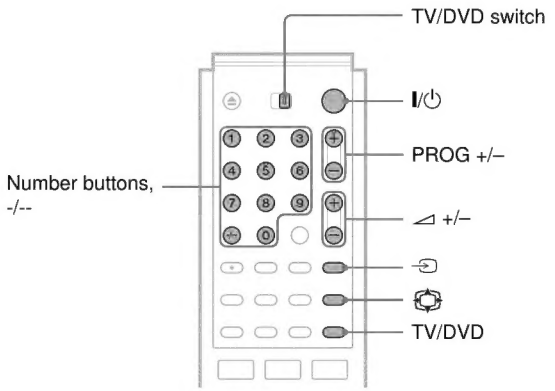

Notes

- Depending on the connected unit, you may not be able to control your TV or AV amplifier (receiver) with some or all of the buttons below.
- If you enter a new code number, the code number previously entered will be erased.
- When you replace the batteries of the remote, the code number may be reset to the default setting. Set the appropriate code number again.

Controlling TVs with the remote

1 Slide the TV/DVD switch to TV.

2 Hold down I/⏻.

3 Enter your TV's manufacturer code (see "Code numbers of controllable TVs" below) using the number buttons.

4 Release I/⏻.
When the TV/DVD switch is set to TV, the remote performs the following:

I/⏻	Turns your TV on or off
(volume) +/–	Adjusts the volume of your TV
(wide mode)	Switches to or from the wide mode of a wide-screen TV
(TV/video)	Switches your TV's input source
PROG +/–, Number buttons, -/--*	Selects the programme position on your TV

* If you use number buttons to select the TV's programme position, press -/-- followed by the number buttons for two-digit numbers.

To operate the TV/DVD button (for SCART connections only)

The TV/DVD button switches between the recorder and the last input source selected on the TV. Point your remote at the recorder when using this button. The button works even if the TV/DVD switch is set to DVD.
When you connect the recorder to the TV via the SCART (EURO AV) jacks, the input source for the TV is set to the recorder automatically when you start playback. To watch another source, press the TV/DVD button to switch the TV's input source.

Code numbers of controllable TVs

If more than one code number is listed, try entering them one at a time until you find the one that works with your TV.

Manufacturer	Code number
Sony	01 (default)
Aiwa	01 (default)
Grundig	11
Hitachi	24
Loewe	08, 45
Nokia	15, 16, 69
Panasonic	17, 49
Philips	06, 07, 08
Saba	12, 13
Samsung	06, 22, 23
Sanyo	25
Sharp	29
Telefunken	36
Thomson	43
Toshiba	38

➡continued

Controlling the volume of your AV amplifier (receiver) with the remote

1 **Slide the TV/DVD switch to DVD.**

2 **Hold down I/⏻, and enter the manufacturer code (see the table below) for your AV amplifier (receiver) using the number buttons.**

3 **Release I/⏻.**

The ◿ (volume) +/– buttons control the AV amplifier's volume.

◆ **If you want to control the TV's volume**

Slide the TV/DVD switch to TV.

Hint

If you want to control the TV's volume even when the TV/DVD switch is set to DVD, repeat the steps above and enter the code number 90 (default).

Code numbers of controllable AV amplifiers (receivers)

If more than one code number is listed, try entering them one at a time until you find the one that works with your AV amplifier (receiver).

Manufacturer	Code number
Sony	80, 88, 89, 91
Denon	84, 85, 86
Kenwood	92, 93
Onkyo	81, 82, 83
Pioneer	99
Sansui	87
Technics	97, 98
Yamaha	94, 95, 96

Note

If you cannot control the volume of your Sony AV amplifier (receiver) with the remote, try entering the code number 91, and change the command mode of your amplifier (receiver) to "COMMAND MODE [AV1]" (not all amplifiers have this option).
See the instructions supplied with your amplifier (receiver) to change the command mode.

Connecting a VCR or Similar Recording Device to the LINE3 Jack

You can use this recorder as the source player or as the recording deck. *See "Recording From Equipment Connected to the LINE IN Jacks" in the separate booklet "Operating Instructions"* when connecting to the LINE 2 IN or LINE 4 IN jacks.
Disconnect the recorder's mains lead from the mains when connecting the VCR or recording device.

How to connect to record

Connect a VCR or similar recording device to the LINE 3/ DECODER jack of this recorder. Then press INPUT SELECT to select "L3." You are ready to start recording.
If you are using this recorder as the recording deck, *see "Recording from Equipment Connected to the LINE IN jacks" in the separate booklet "Operating Instructions."*
If you are using this recorder as the source player, refer to the instructions of the connected device for recording instructions.

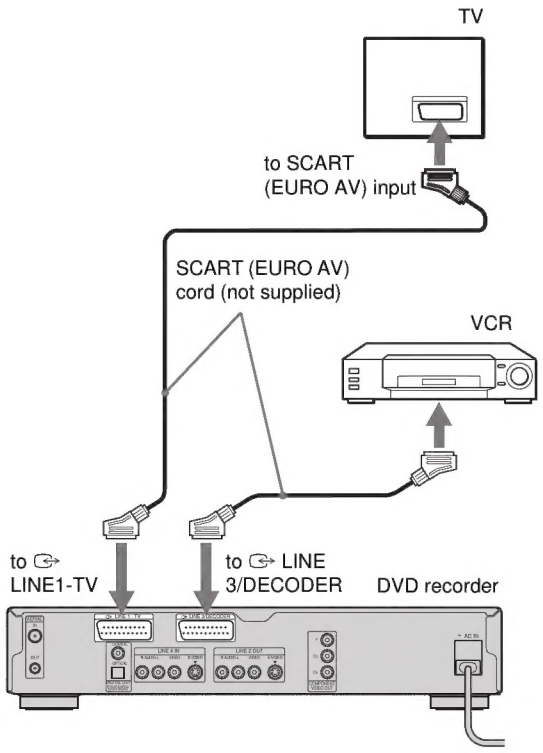

Hint

If you are using another recorder with S VIDEO and AUDIO IN/OUT jacks, you can connect those jacks to this recorder's S VIDEO and R-AUDIO-L IN/OUT jacks.

Notes

- If you pass the recorder signals via the VCR, you may not receive a clear image on the TV screen.



- SMARTLINK features are not available for devices connected via the DVD recorder's LINE 3/DECODER jack.
- Pictures containing copy protection signals that prohibit any copying cannot be recorded.